

**Before you read:** We have tried our best to ensure the completeness and accuracy of the manual content, but there are also technical inaccuracies, inconsistencies with product functions and operations, or printing errors. The product and manual will be updated in real time without further notice.

The content of this manual is only for users' reference and guidance. It is not guaranteed to be completely consistent with the actual product. Please refer to the actual product.

The parts, components, and accessories mentioned in this manual are for illustration purposes only, and do not represent the configuration of the purchased model. For detailed configuration, please refer to the packing list.

This manual is a guide for basic functions.

Precautions for safe use :

The purpose of this content is to ensure that the user uses the product correctly to avoid danger or property damage. Before using this product, please read this instruction manual carefully and keep it for future reference.

As shown below, the precautionary measures are divided into two parts: "Warning" and "Caution":

**WARNING:** Ignoring the warnings can result in death or serious injury.

**Caution:** Ignoring the precautions can cause injury or property damage.

Symbol	Description
Warning	Indicates a severe or low potential hazard that, if not avoided, could result in minor or moderate injury.
Caution	Indicates a potential risk, which if ignored could result in equipment damage, data loss, degraded device performance, or unpredictable results.
Description	Representation is an additional message to the text, which is an emphasis and supplement to the text.

**Warning:**

When installing and using this product, you must strictly abide by various national and regional electrical safety regulations.

Use a power adapter provided by a regular manufacturer ◦

Please disconnect the power when wiring, disassembling, etc. Do not operate with power on.

If the equipment does not work properly, please contact the store where you purchased the equipment or the nearest service center. Do not disassemble or modify the equipment in any way.

**Caution:**

Do not drop objects on the device or shake the device vigorously, and keep the device away from locations subject to magnetic interference. Avoid installing the device in a place subject to vibration or impact. (Ignoring this may damage the device)

Do not install the equipment in high temperature (over 60 °C) or low temperature (less

than - 30 °C) or high humidity locations

Provide a good ventilation environment

Do not operate in a humid environment.

Do not operate in explosive environments.

Keep the product surface clean and dry.

Avoid touching exposed circuits. When the product is powered on, do not touch exposed contacts and parts.

## Content

Chapter 1 Network connection topology diagram .....	5
Chapter 2 Network access and parameter configuration .....	6
2.1 Access via browser (360 browser is recommended) .....	6
Chapter 3 system .....	8
3.1 Local config .....	8
3.2 User management .....	9
3.3 System.....	9
3.3.1 System info.....	9
3.3.2 System time.....	10
3.3.3 Algorithm information .....	10
3.4 Safety .....	11
3.4.1 Upgrade.....	11
Chapter 4 Picture .....	12
4.1 Video parameter .....	13
4.1.1 Basic parameter .....	13
4.1.2 Advanced parameters.....	14
4.1.3 IR settings.....	15
4.2 Screen parameter .....	15
Chapter 5 Network and Storage .....	16
5.1 Base config .....	16
5.2 Advanced configuration.....	17
5.2.1 FTP configuration.....	17
5.2.2 RTSP configuration.....	17
5.3 Platform parameters .....	18
5.4 Storage settings.....	19
Chapter 6 Event .....	20
6.1 Normal event.....	20
6.1.1 Motion detection alarm .....	20
6.2 Smart face .....	21


6.2.1 Parameter setting .....	21
6.2.2 Video mask .....	22
6.3 List management .....	22
6.3.1 Import list .....	22
6.3.2 Preview list .....	23
6.3.3 Alarm system .....	23
6.3.4 Comparison records.....	24
6.4 Smart access control.....	25
6.4.1 Parameter setting .....	25
Chapter 7 Audio and video intercom .....	26
7.1 Video coding.....	26
7.2 Audio parameter .....	27
Chapter 8 Face recognition and thermal human temperature measurement.....	28

# Chapter 1 Network connection topology diagram

Connect the access control and computer  
Camera-Network Cable-Computer


Before accessing the access control machine through the network, you first need to obtain its IP address, the default IP address is 192.168.1.100. You can also use "DevConfig" to search for the access control machine.

Run DevConfig, click "Search", the software will automatically display the device name, IP, page version, version, device ID, physical address, operating time and upgrade / configuration status of the access control machine currently running in the local area network

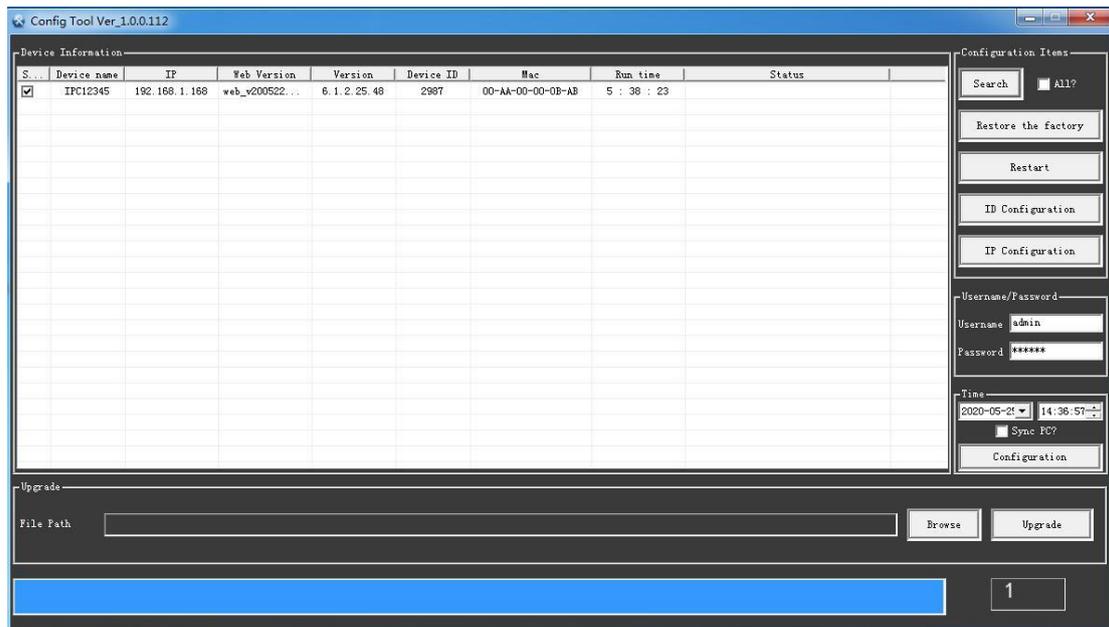

If the searched IP address and the computer are not on the same network segment, you can use the IP configuration button to modify the camera's IP address, subnet mask, and default gateway parameters.

Check the device to be modified in DevConfig and click IP settings

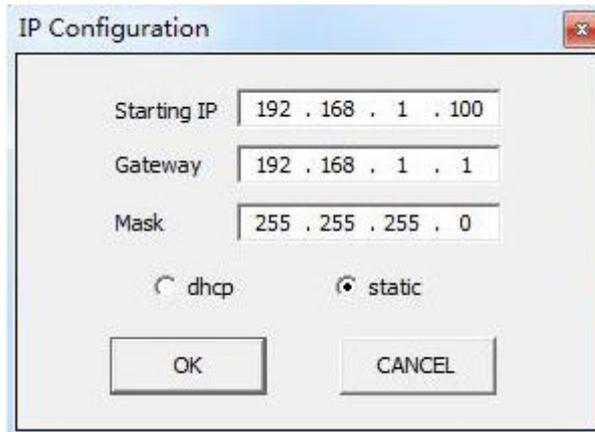

After entering, click OK

Caution: The access control factory default IP: 192.168.1.100 Default username: admin Default password: 123456


## Chapter 2 Network access and parameter configuration

Caution: Before accessing the device, please note whether the access control is in the same network environment as the computer

### 2.1 Access via browser

Step 1: Install the plugin

Enter the IP address of the access control machine in the browser address, and then press Enter. After entering the background interface of the access control machine, click "Download Address", as shown in Figure 2.1.1. After clicking, the prompt "Install WebCamera.exe" appears. Run / save for installation, as shown in Figure 2.1.2.

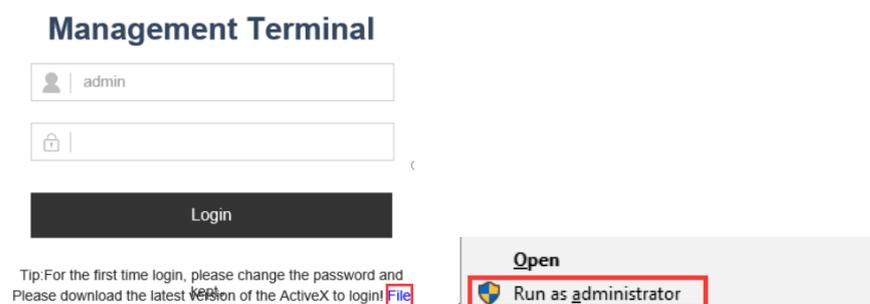

#### 2.1.1

Click File to download and install the Active-X plugin run as administrator when the

first login.



## 2.1.2


Step 2: Login and set up preview

Preview image


In the login interface, as shown in Figure 2.1.3, enter the user name (default: admin), password (default: 123456) of the access control machine, and then click [Login] to preview the image, as shown in Figure 2.1.4

Click File to download and install the Active-X plugin run as administrator when the first login.

## 2.1.3

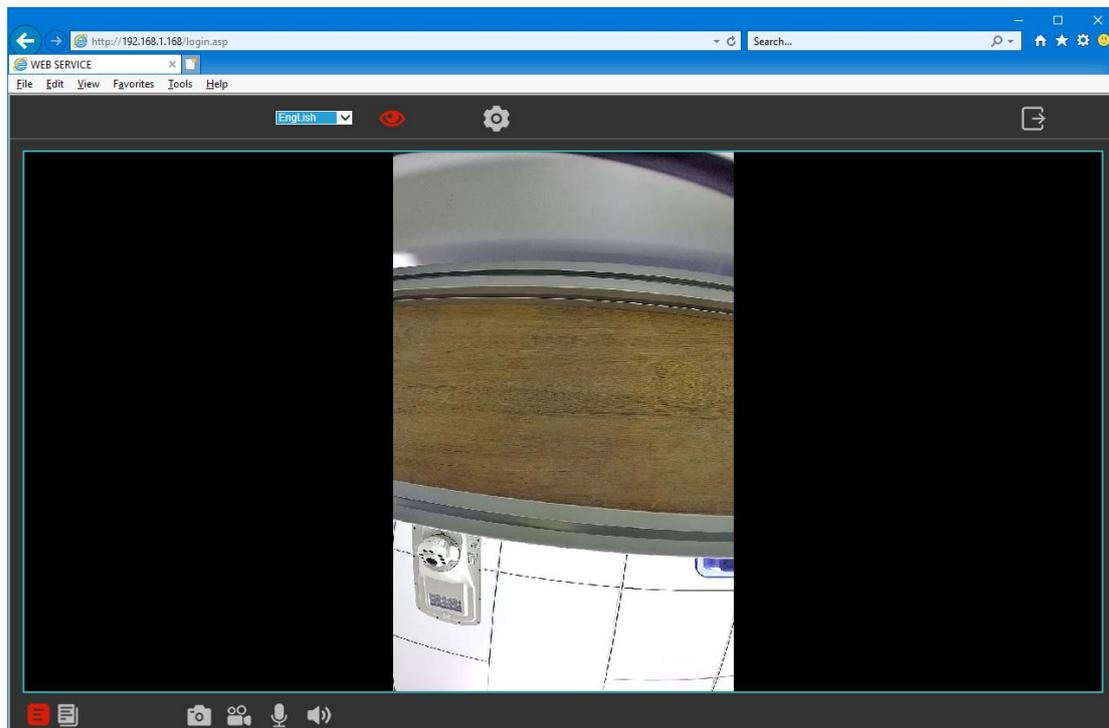

## 2.1.4

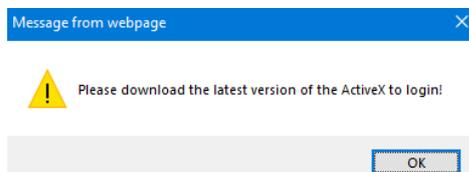


If you cannot log in, please allow "WebCamera.exe" to run, as shown in Figure 2.1.5



2.1.5

## Chapter 3 system

Click [Setting] as shown in Figure 3.0.1 to enter the setting interface

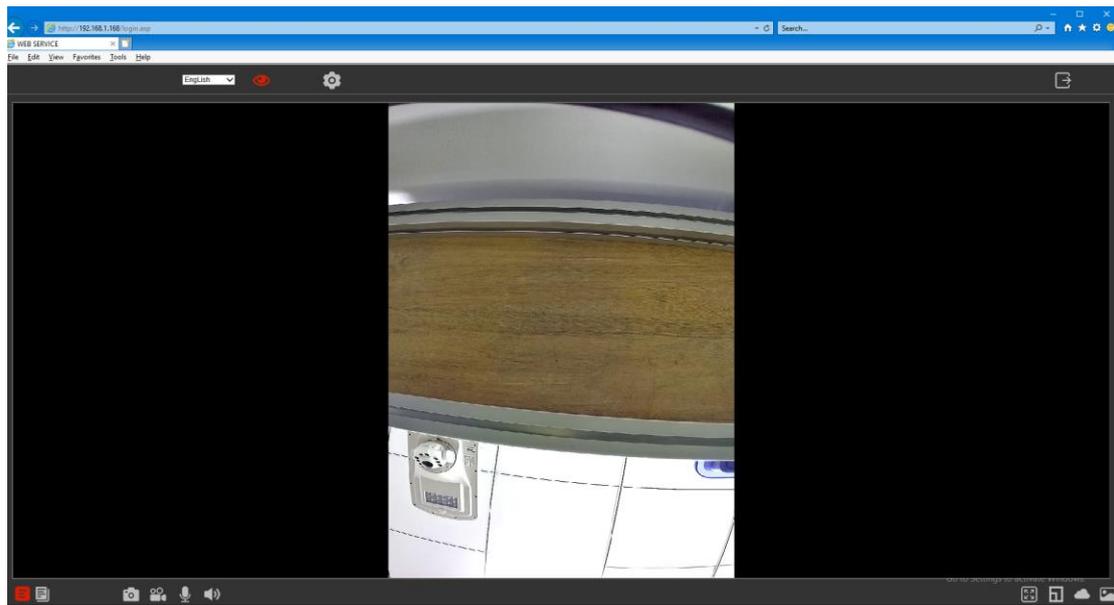


Icon	Description
	Snap picture
	Start or stop recording
	Start or stop intercom
	Start or stop listening
	Preview screen full screen display
	Switch preview screen width and height

3.0.1

### 3.1 Local config

"Local Config" (Figure 3.1.1) can change the length of each video and the file storage path


The length of each video is selectable: 1, 5, 10, 15, 20, 25, 30, 60 (minutes)

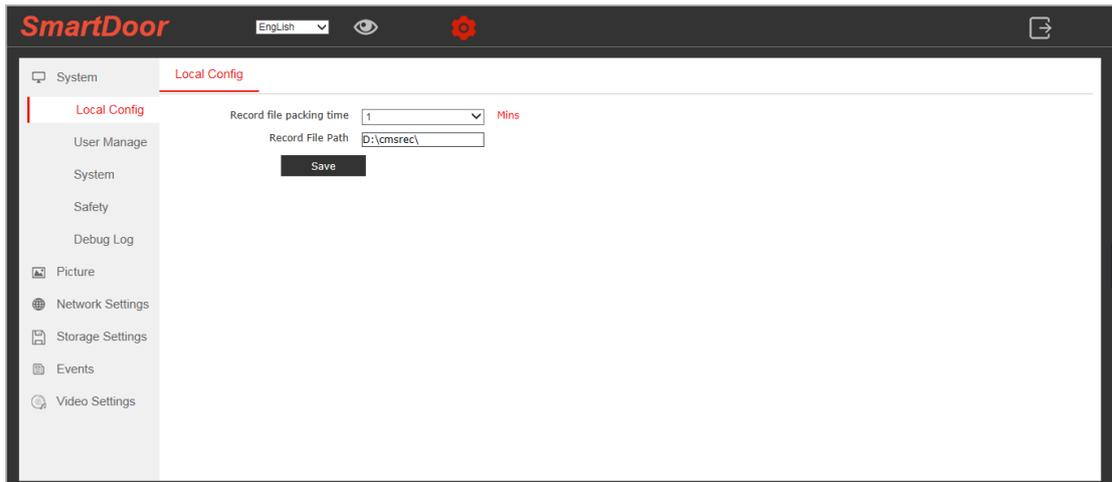

3.1.1

## 3.2 User management

Click "System"->"User Management" (Figure 3.2.1) to enter the user management interface, the user management interface can modify the user name and password

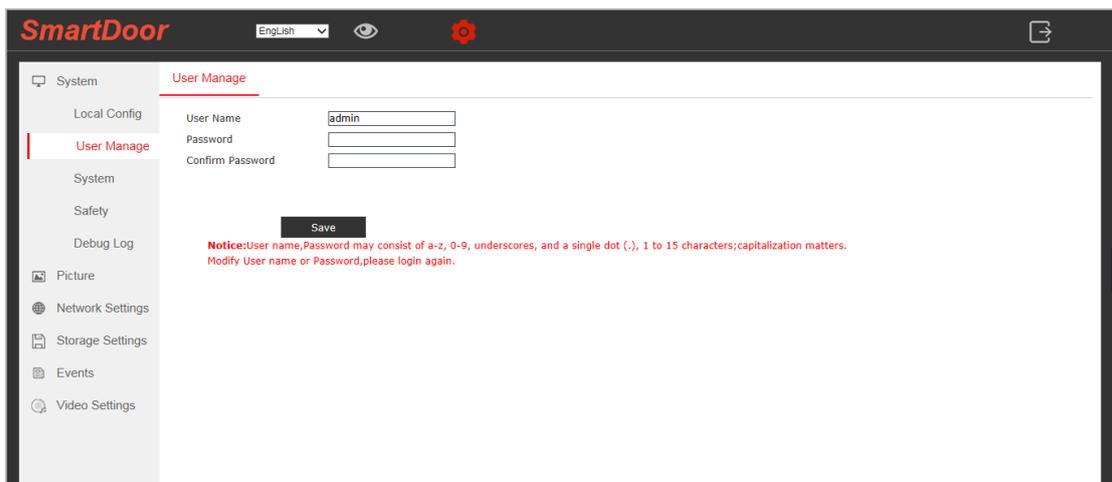

3.2.1

## 3.3 System


### 3.3.1 System info

"Click System-System – System info"

Enter the "System" interface, as shown in Figure 3.3.1

In System info, you can modify the device name

You can also view the device ID and device version

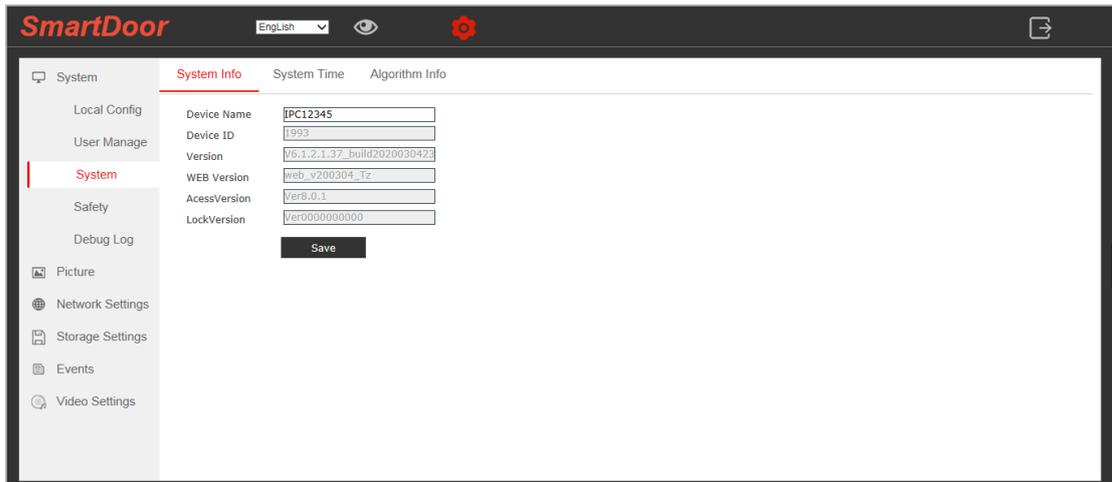

3.3.1


### 3.3.2 System time

“Click System-System -System Time ” to enter the System Time interface, as shown in Figure 3.3.2

Click "Sync PC"  to synchronize with the current computer time

Time zone can be modified according to your region


The time update period defaults to proofreading every 60 minutes

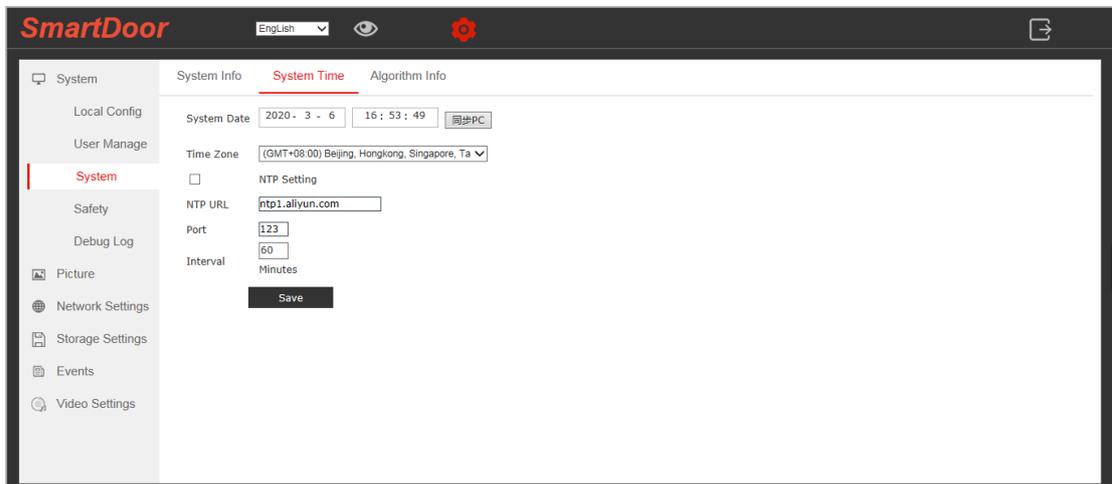

3.3.2

### 3.3.3 Algorithm information

View algorithm version and model version.

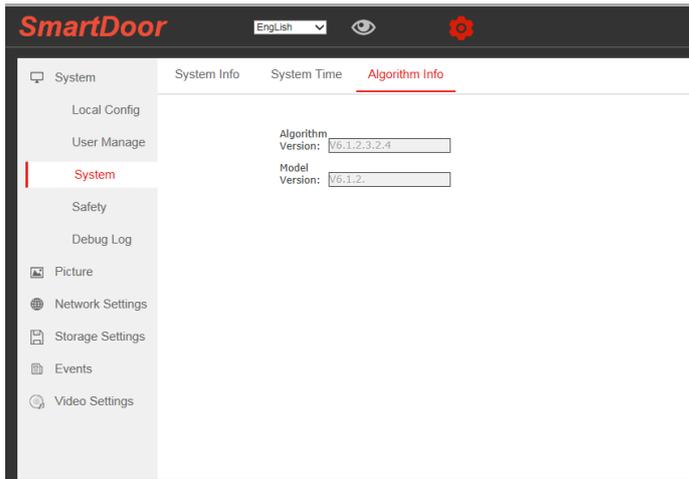

3.3.3


## 3.4 Safety

### 3.4.1 Upgrade

Enter the "Upgrade" interface, as shown in Figure 3.4.1

Device maintenance interface can restore the device to factory settings, restart settings, and upgrade versions.


Click "Restart Device" to complete the restart, or you can set a scheduled restart Date can be fixed daily or daily.

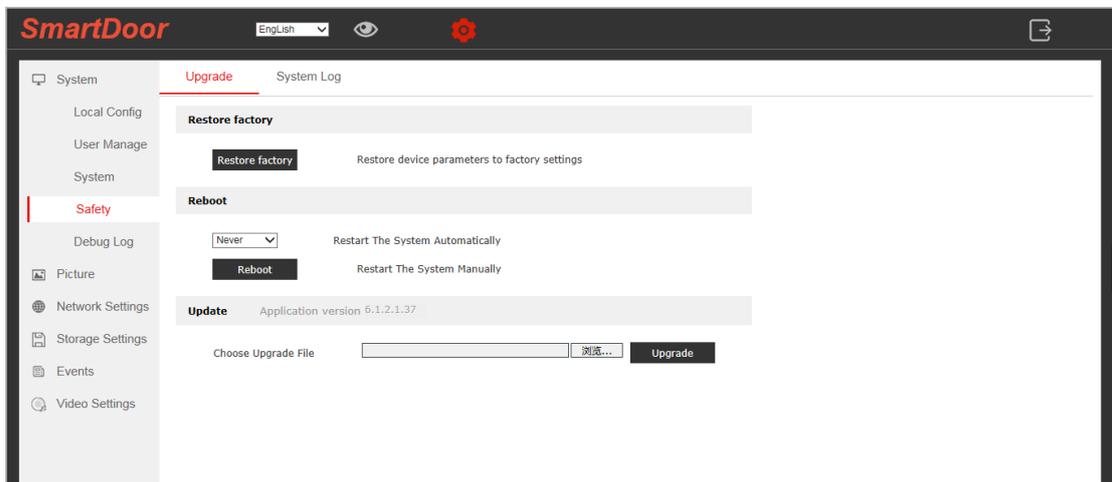

3.4.1


### 3.4.2 System log

Viewing the System Log

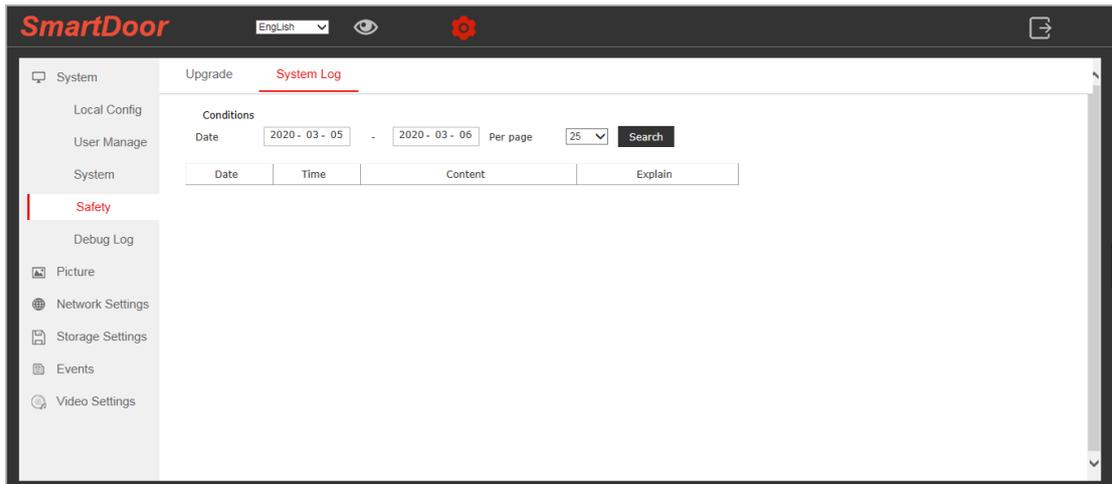

3.4.2

## Chapter 4 Picture

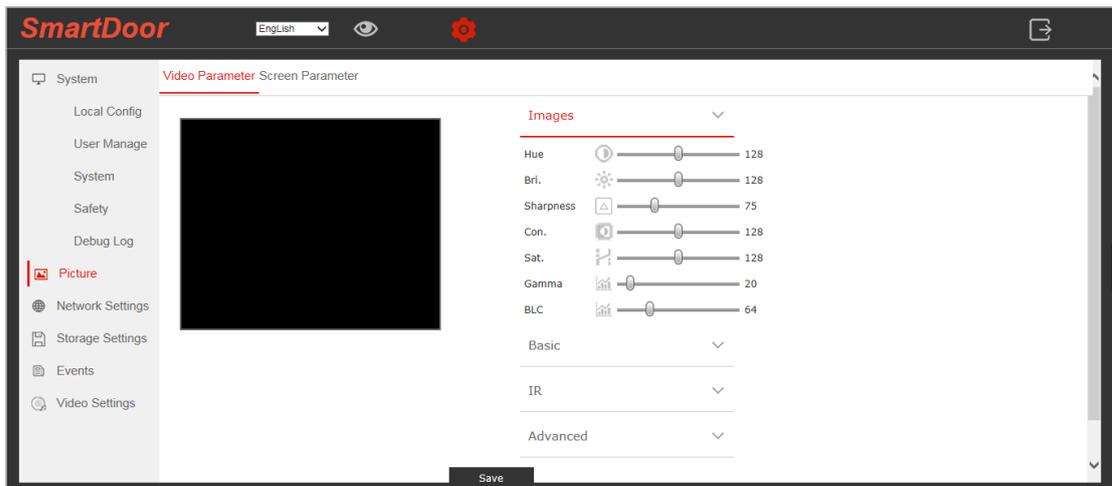

4.0.1

## 4.1 Video parameter

### 4.1.1 Basic parameter

---

Images ▼

---

**Basic** ▼

---

Mirror  ▼

Flip  ▼

CTB  ▼

3D-DNR  ▼

LSC  ▼

Video  ▼

Standard

Iris Mode  ▼

WDRStrength   0

HLC  ▼

---

IR ▼

---

4.1.1

Basic parameter	Description
Color	0-255 Optional
Light	
Sharpness	
Contrast	
Saturation	
Gamma	
BLC	

## 4.1.2 Advanced parameters

Basic ▼

---

IR ▼

---

**Advanced** ▼

---

AntiFogging  ▼

WB  ▼

Image  ▼

Stabilizer

Exposure  ▼

Time

AGain 

AntiFalseColor



### 4.1.2

Advanced parameter	Description
Image	Open, close optional
Flip	Open, close optional
Color to black	Color, black and white, auto selectable
3D noise reduction	Off, low, medium, high selectable
Lens correction	Open, close optional
Video format	50HZ · 60HZ optional
Auto iris	Open, close optional
Wide dynamic strength	0-255 optional

### 4.1.3 IR settings

---

Basic ▼

---

**IR** ▼

---

IR mode  ▼  
 ▼

Black-Color  s  
Color-Black  s

ICR  ▼

IR  ▼

IR Direction  ▼

---

Advanced ▼

### 4.1.3

IR settings	Description
IR mode	1.Video detection, time detection, photoresistor detection are optional 2.Active low, active high, automatic detection optional
Black to color time	0-60 seconds optional
Color to black time	0-60 seconds optional
ICR control	Active low, active high optional
IR control	On, off, auto selectable
IR direction	Active low, active high optional


## 4.2 Screen parameter

Adjust the screen bright mode, constant light, automatic, time optional

"Always on": Always on screen

"Auto": bright screen when an object is detected


"Time": Lighting the screen for a fixed time

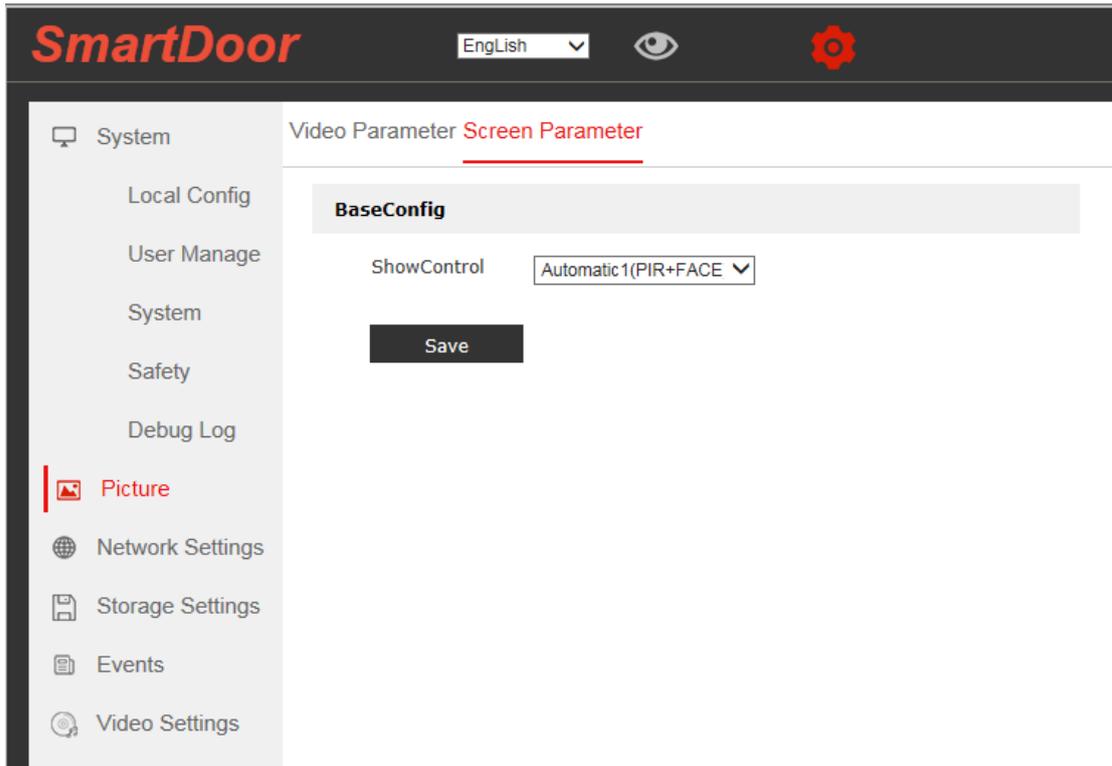

4.2.1

## Chapter 5 Network and Storage

### 5.1 Base config

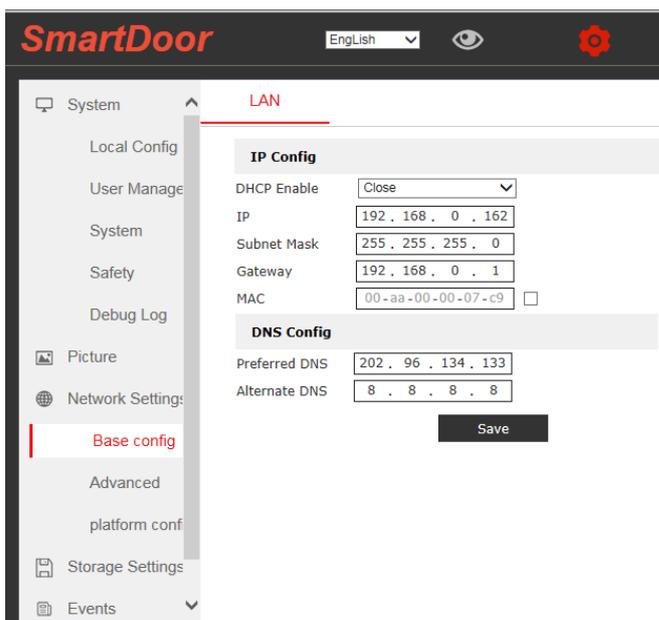

5.1.1

## TCP / IP

You can set the IP address, subnet mask, gateway, physical address, and DNS address of the access control machine according to actual requirements.


IP address default 192.168.1.1

Can be adjusted according to actual needs

## 5.2 Advanced configuration

### 5.2.1 FTP configuration

Can configure server address, server side port, server user name, server password, and save path. FTP protocol uses 20 in TCP port by default according to actual situation. And 21 ports, 20 of which are used to transmit data, 21 for transmitting control information.

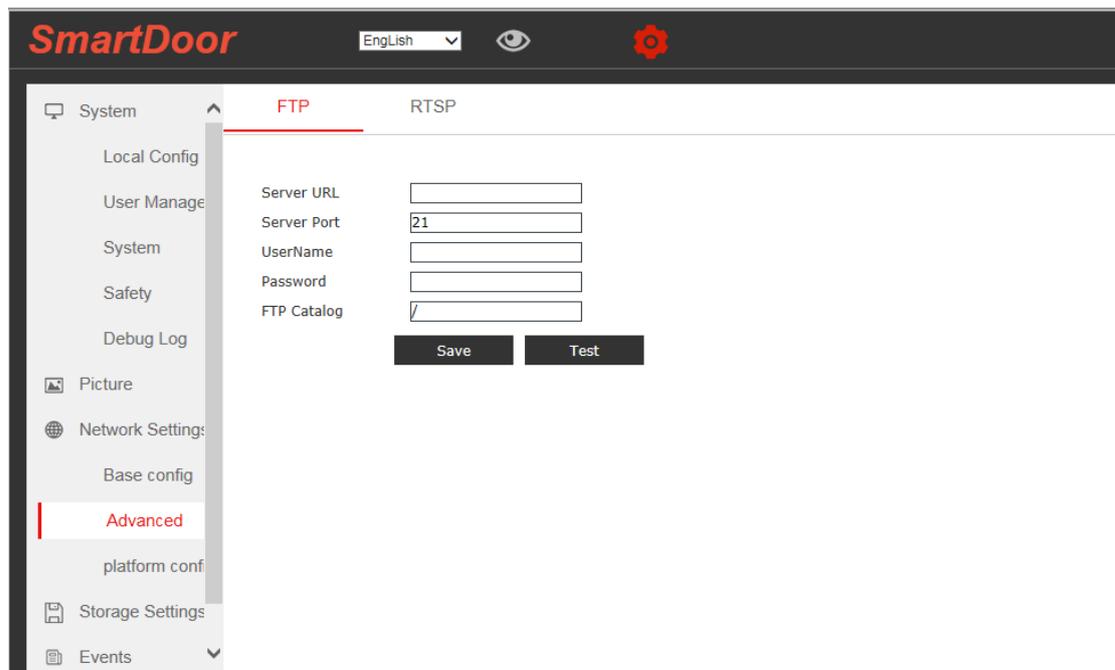


### 5.2.1

### 5.2.2 RTSP configuration

RTSP switch is on by default


The RTSP port defaults to 554, and the packing size defaults to 1460.

Can be adjusted according to the actual situation.

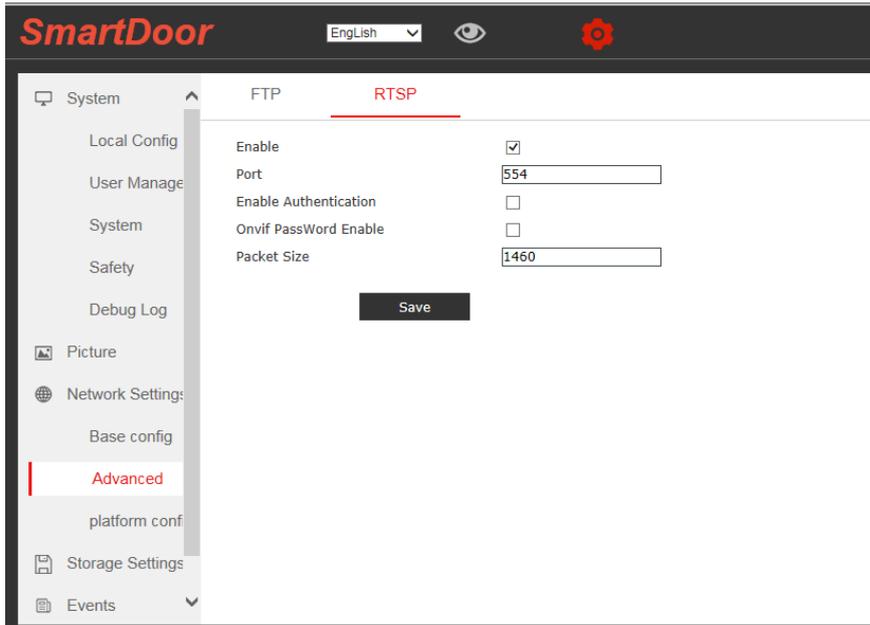

### 5.2.2


## 5.3 Platform parameters

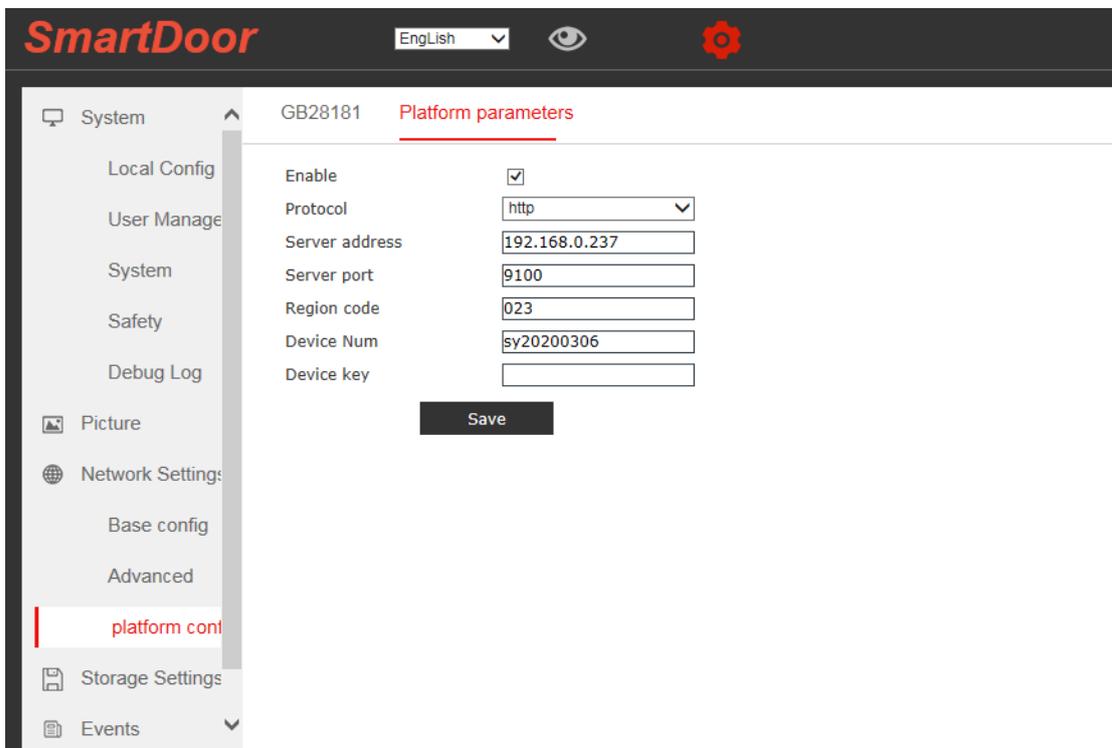

### 5.3.1

Set the access control platform settings, input according to the actual situation.

## 5.4 Storage settings

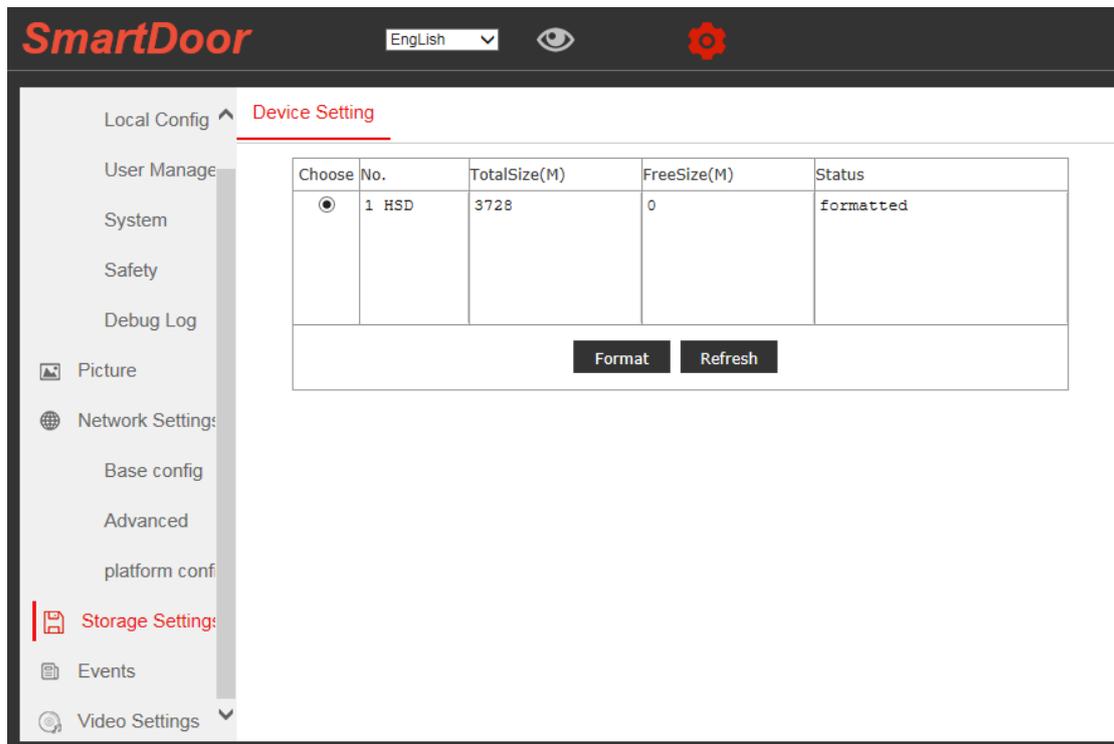

The screenshot shows the SmartDoor web interface. The top navigation bar includes the 'SmartDoor' logo, a language dropdown set to 'EngLish', an eye icon, and a gear icon. A left sidebar contains a menu with items: Local Config, User Management, System, Safety, Debug Log, Picture, Network Settings, Base config, Advanced, platform config, Storage Settings (highlighted in red), Events, and Video Settings. The main content area is titled 'Device Setting' and features a table with the following data:

Choose	No.	TotalSize(M)	FreeSize(M)	Status
<input checked="" type="radio"/>	1 HSD	3728	0	formatted

Below the table are two buttons: 'Format' and 'Refresh'.

### 5.4.1

View storage capacity, format and refresh storage.

# Chapter 6 Event

## 6.1 Normal event

### 6.1.1 Motion detection alarm

Motion Detection Sensor Detection Unlocking



Enable  ▾

Sensitivity  ▾

Time 1   :  --  :

Time 2   :  --  :

IO Output  ▾

Snapshot  ▾

Record  ▾


Audio Out  ▾

### 6.1.1

Motion detection alarm	Description
Motion detection	Open, close optional
Sensitivity	1-5 optional
IO output	Open, close optional
Linkage capture	Open, close optional
Linkage recording	Open, close optional
Audio output	Open, close optional

## 6.2 Smart face

### 6.2.1 Parameter setting

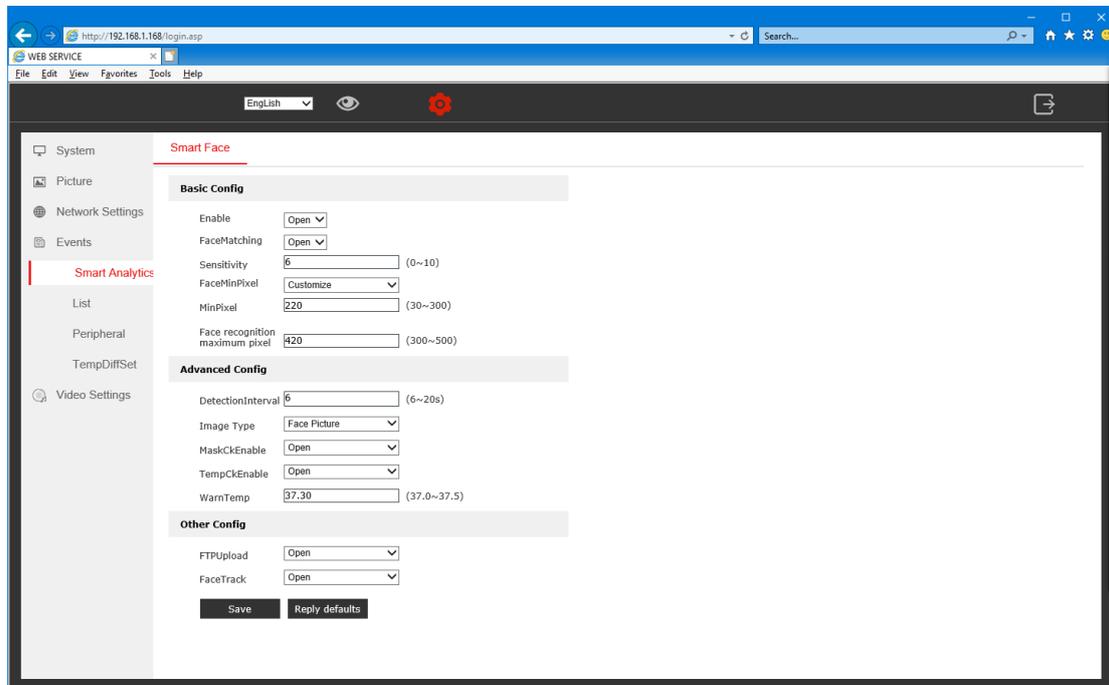


### 6.2.1

Parameter Setting	Description
Face Algorithm Enable	Open, close optional
Snapshot threshold	0-10 optional
Capture the smallest pixel	Automatic, custom optional
Minimum pixel	30-300
Snapshot mode	Long corridor mode, speed mode, interval mode (in seconds and frames), gate, optimal mode, access control mode
Push heartbeat picture	Open, close optional
FTP push image	Open, close optional
Overlay face frame	Stacking 8 targets, stacking 32 targets, and closing are optional

## 6.2.2 Video mask

Tick "Enable Mask", click on the mask area set, and press and hold the left button in the screen to select the area to block the frame selection area.

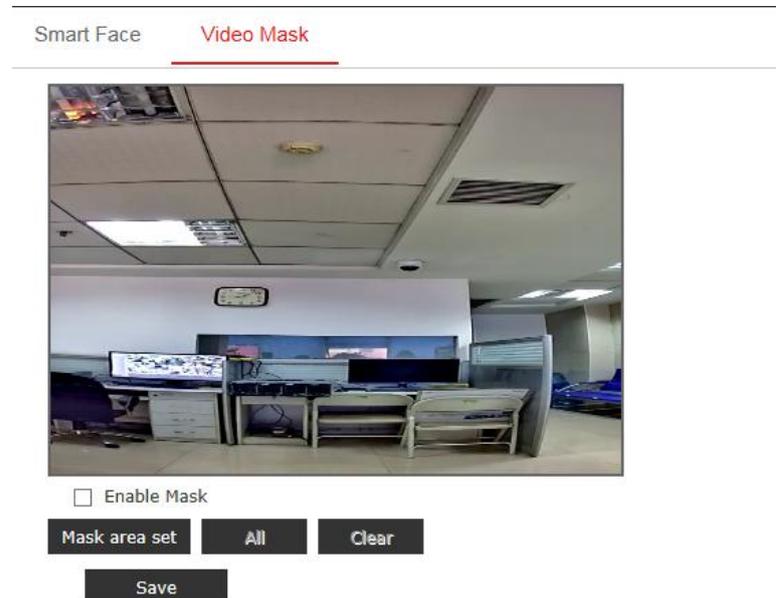

6.2.2


## 6.3 List management

### 6.3.1 Import list

Picture types can be selected for capture and import


Snapshot: After entering the picture name and picture number, click on the list to be added, the system will capture and recognize the next face, and automatically import the recognition result picture into the corresponding library.

Import: After entering the picture name and picture number, click on the list to be added, manually upload the picture to be imported, and click on the list to be added, and the storage is successful.

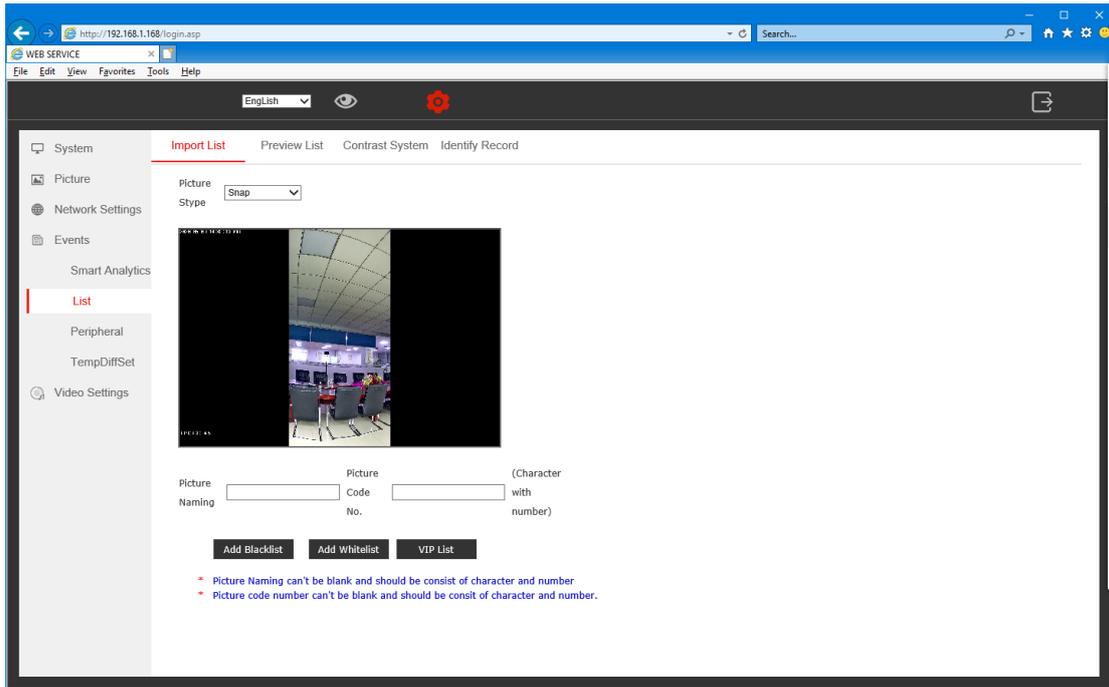

### 6.3.1

### 6.3.2 Preview list

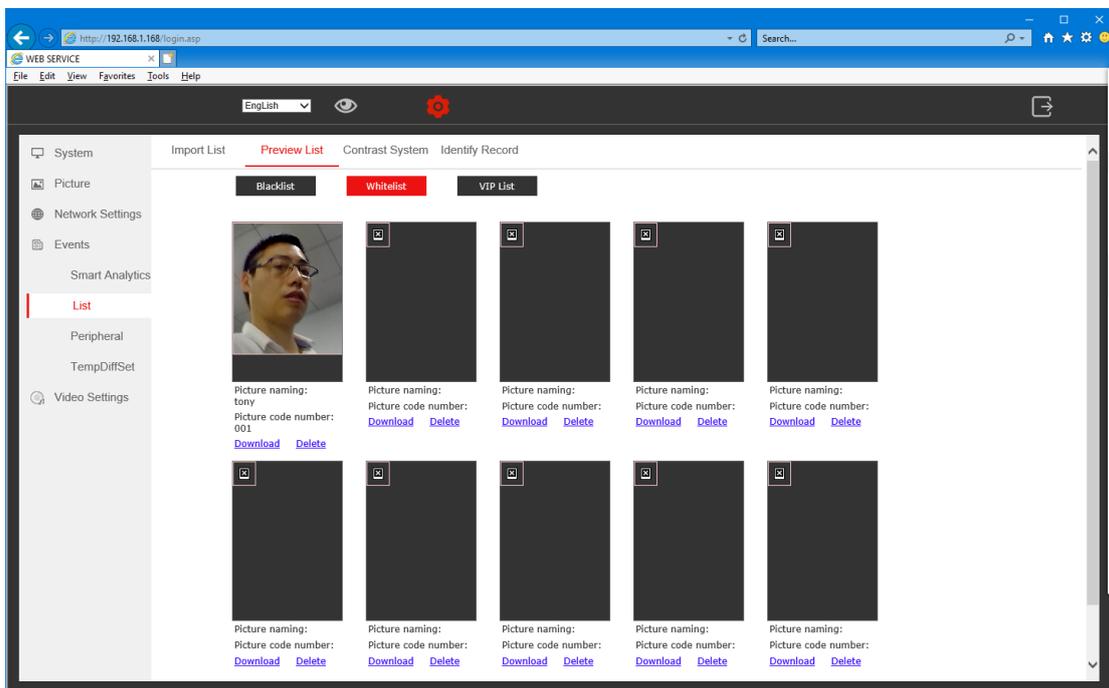

### 6.3.3 Alarm system

Recognition alarm can be given to the specified list, the number of recognition is the word face

Maximum number of recognitions after entering the recognition area.

Note: Modifying the comparison similarity may affect the recognition accuracy.

[Import List](#)   [Preview List](#)   **[Alarm System](#)**   [Comparison Record](#)

---

Alarm Switch

Blacklistalarm

Whitelistalarm

vip Alarm

nonWhitelistalarm

Arming time period 1  0 : 0 -- 23 : 59

Arming time period 2  0 : 0 -- 23 : 59

RecognitionMode

Number of recognition  (1~10)

Comparisonsimilarity  (0-100)

IO Output

### 6.3.3

## 6.3.4 Comparison records

View face recognition record, can specify time period and any list.

Routing Mac	Snapshot	name	Serial number	list	time	Temperature	Whether Mask	Detailed situation
		No	No	Stranger	2020-05-08 14:36:55	36.55°C	否	similarity:0%,Number of visit:0,Age:0,Sex:Man,Glasses:Have,Mask:No,Race:White,Beard=No,Emotion=no
		tony	001	WhiteList	2020-05-07 20:26:11	36.59°C	否	similarity:93%,Number of visit:0,Age:0,Sex:Man,Glasses:Have,Mask:No,Race:White,Beard=No,Emotion=no
		No	No	Stranger	2020-05-20:13:39	36.43°C	否	similarity:0%,Number of visit:0,Age:0,Sex:Woman,Glasses:Have,Mask:No,Race:White,Beard=No,Emotion=n
		No	No	Stranger	2020-05-18:18:34	36.40°C	否	similarity:0%,Number of visit:0,Age:0,Sex:Woman,Glasses:Have,Mask:No,Race:White,Beard=No,Emotion=n
		No	No	Stranger	2020-05-18:18:20	36.40°C	否	similarity:0%,Number of visit:0,Age:0,Sex:Woman,Glasses:Have,Mask:No,Race:White,Beard=No,Emotion=n
		No	No	Stranger	2020-05-17:22:56	36.58°C	是	similarity:0%,Number of visit:0,Age:0,Sex:Man,Glasses:Have,Mask:Have,Race:White,Beard=No,Emotion=n

### 6.3.4

## 6.4 Smart access control

### 6.4.1 Parameter setting

Parameter setting	Description
Access control mode	Local offline, access control platform mode optional
Detection threshold	Open, close optional
Reference frames	3、5、7、9、11、13、15 optional
Single door open times	1~5 optional
Door opening interval	0~10 optional
Door opening restrictions	Normal mode, face selectable
Voice prompts	Open, close optional
Stranger Tips	Open, close optional

English

System

Local Config

User Manage

System

Safety

Debug Log

Picture

Network Settings

Storage Settings

Events

Smart Analytics

List

Peripheral

TempDiffSet

Video Settings

Setting

**BaseConfig**

WorkMode: LocalOffline

AlarmMode: NormalMode

UIRefreshDealy: (2~10)s

**FaceOpen**

TemperatureNormal:

WearMask:

**VoiceSetting**

VoicePrompts: Open

StrangerPrompts: Close

MaskVoice: Close

**VideoSetting**

VideoSwitch: Close

**UnlockingParam**

UnlockControl: Open

UnlockOutputTime: (1~254)\*50ms

UnlockingMethod: Remotely

Save

### 6.4.1

# Chapter 7 Audio and video intercom

## 7.1 Video coding

---

**Video Coding** Audio Parameter

---

Stream type

Coding Level

Coding

Resolution

Rate control

Bitrate(Kb/S)

Frame rate(F/S)

GOP(F)

### 7.1.1

Video encoding	Description
Stream type	Main stream and sub stream are optional
Coding level	Base line 、 Main Profile 、 High Profile optional
Coding	H.264 、 MJPEG 、 H265 、 H265+ optional
Bit rate type	Variable code stream and fixed code stream are optional

## 7.2 Audio parameter

---

Video Coding **Audio Parameter**

---

Enable

Audio Input

Compression

Type

Audio Bitrate

Sampling Rate

Input Volume

Output Volume

### 7.2.1

Audio setting	Description
Enable	Checkable
Audio input	Microphone, line input optional
Compression	G.762 、 G.711A 、 G.711U 、 AAC optional
Audio bit rate	16000
Sampling Rate	8K
Input volume	0-15
Output volume	0-15

# Chapter 8 Face recognition and thermal human temperature measurement

Motion Detection Sensor Detection **Unlocking**

## BaseConfig


UnlockControl  ▼

UnlockOutputTime  (1~30)

Save

### 8.1.1


Unlock control	
Unlock control	Open, close
Unlock output time	1—30 optional

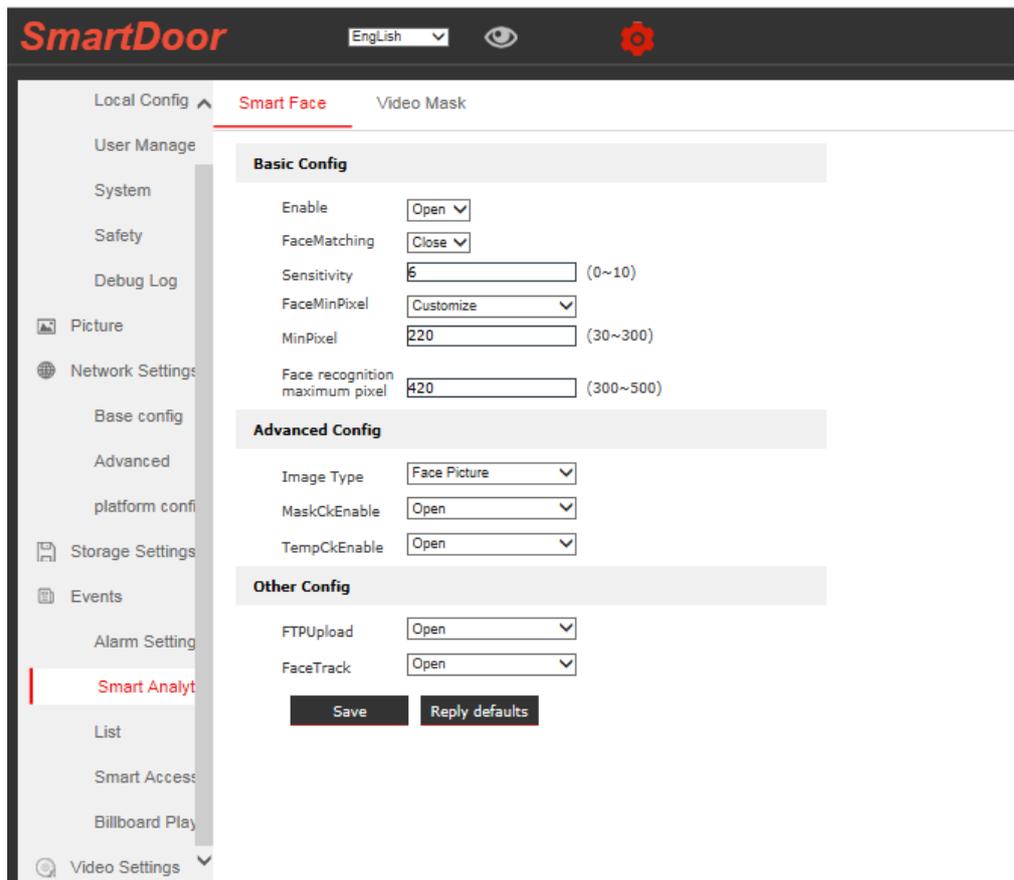

### 8.1.2

Parameter setting			
Face Algorithm Enable	Open, close optional	Push Picture Type	Uploading faces, uploading scene images, uploading scene images, and faces are optional
Face Contrast Switch	Open, close optional	Push heartbeat picture	Open, close optional
Snapshot threshold	0—100 adjustable	Mask detection switch	Open, close optional
Capture the smallest pixel	Automatic, custom optional	Body temperature detection switch	Open, close optional
Minimum pixel	30—300 adjustable	FTP push image	Open, close optional
Capture maximum pixels	300—500 adjustable	Overlay face frame	Stack 8 targets, stack 32 targets
Snapshot	Long corridor mode, speed mode, interval mode (in seconds),		

mode	interval mode (in frames), gate mode, optimal mode, access control mode
------	---

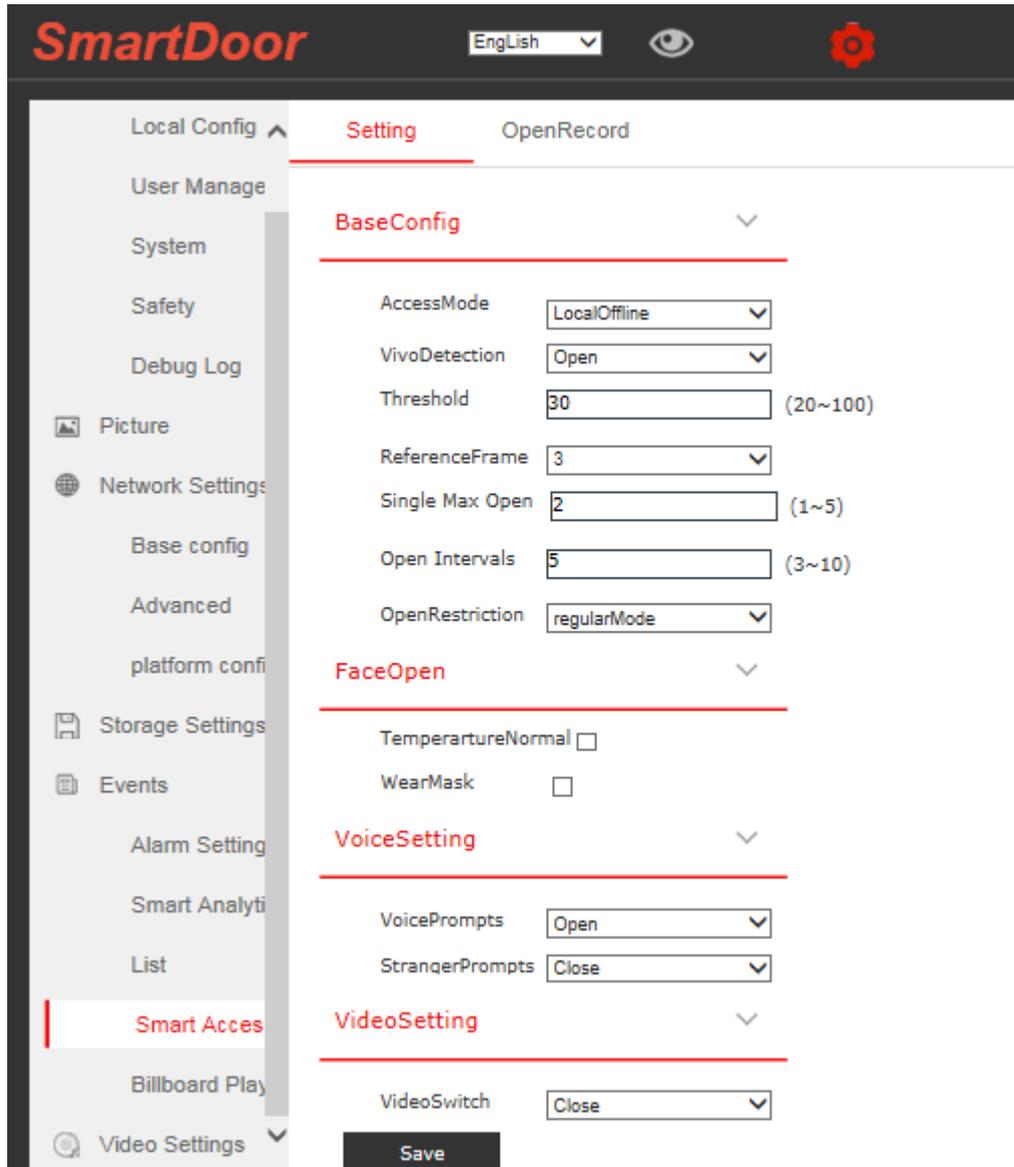

8.1.3

Parameter setting			
Access control mode	Local offline, access control platform optional	Match success	Check (on), uncheck (off)
Live detection	Open, close optional	Body temperature is normal	Check (on), uncheck (off)
Detection threshold (need to enable live detection)	20—100 optional	Wear a mask	Check (on), uncheck (off)

Words maximum door open times	1—5 adjustable	Voice prompts	Open, close optional
Door opening interval	3—10 adjustable	Stranger Tips	Open, close optional
Door opening restrictions	Normal mode, face mode	Video on	Open, close optional