

Thermal Temperature Measurement Camera

User Manual



■ DETAIL PARAMETERS

Model No.	ON-ST182R/20R-2M
Image pixels	2MP Full color
Lens	3.6mm 2MP
Tripod Height	1.8m (adjustment)
power supply	1.5A Wide voltage power supply, 12-36V
Camera connection	Aviation connection
Temperature Detected range	0°C~80°C
Temperature Detected accuracy	+/-0.3°C
snapshot function	auto snapshot with alarm alert
Compression Method	FHD H.264
loop recording	support
Voice alarm	Voice alarm for abnormal body temperature
Resolution	1920*1080P 25fps
TF card	CLASS10 U1 , min 32GB , max256GB °
Display mode	real-time display detected temperature, alarm display in red
time for detecting	3s
detected distance	Best within 3m


■ PACKAGE INCLUDES



■ INSTALLATION



1. Take out the camera/monitor/tripod.
2. Fixed the monitor and tripod with mount screws.
3. Put the camera base to bayonet, locking screw on the bracket. then adjust horizontal and vertical view angle.

Note: The best measurement distance is 1M.

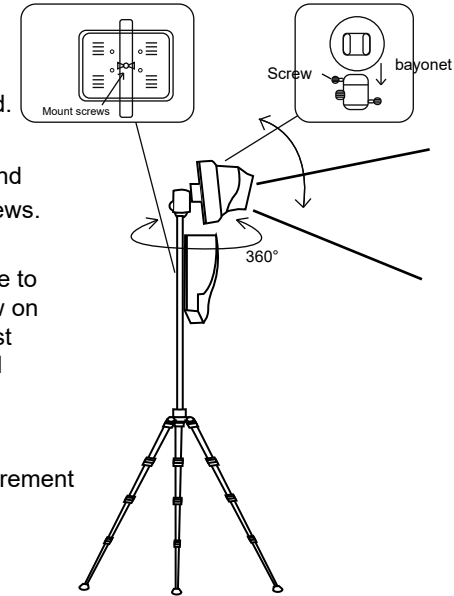


■ MEASUREMENT

In order to maximize the temperature measuring speed of the thermometer, the waiting area is located directly in front of the thermometer at 45°. The temperature measuring object stands in the temperature measuring area and waits. After the voice alarm, it can leave and the next one can enter the temperature measuring area.

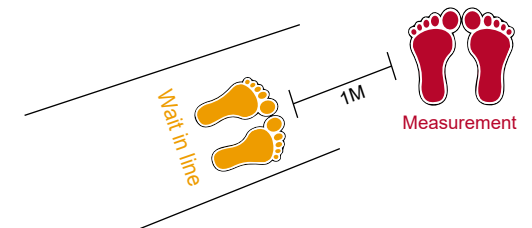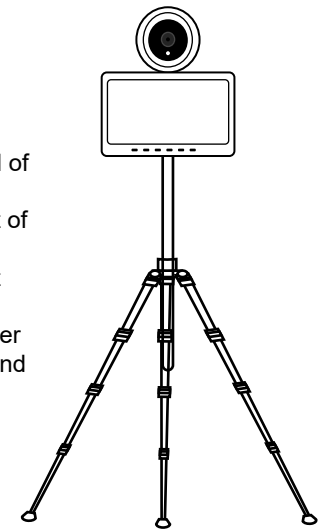

■ MENU INSTRUCTIONS:

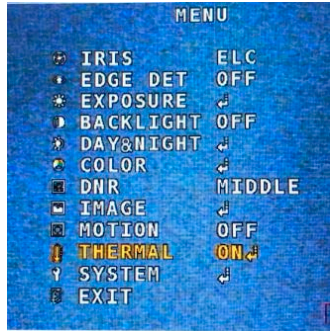

1.

Enter to Menu,click
THERMAL
Thermal Setting



2.

THERMAL
DET RANGE
OSD
ALARM
CALIB



3.

DET RANGE

POS-X: the zone move to left/right, left is zoom out, right is zoom in.

POS-Y: the zone move to up/down, up is zoom out, right is zoom in

SIZ-Y : the value smaller ,the right area will be narrow.the value bigger ,the right area will be extension.

SIZ-X: the value bigger ,the top area will be extension,the value smaller,the top area will be narrow.




4.

OSD

MAX TEMP : ON/OFF

(The maximum value is displayed on the upper left corner of the screen)

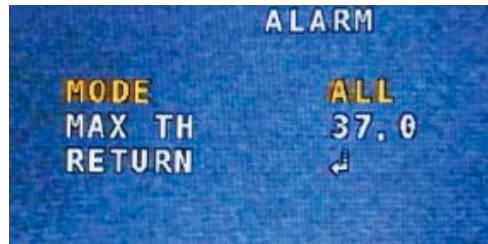

5.

ALARM


MODE: OSD/GPIO/ALL

OSD:only show temperature and zone become red.

GPIO: audio alarm.

ALL: OSD and GPIO.

MAX TH: alarm temperature vlaue setting.

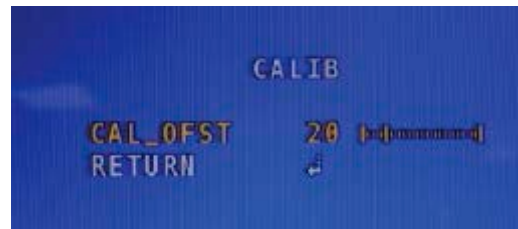

6.

CALIB

CAL_OFST: 0.....50.....100

(temperature measured compensation.

Up the parameter to compensate for increasing measurement temperature, Down the parameter to compensate for decreasing measurement temperature 1 unit value is approximately equal to 0.1 ℃,

Subject to actual application

■ RECORDING SETTING

1. Install the SD card (the bayonet on the right).



2. Press the "MODE" key to start /end recording.



3. After recorded, can view the "playback" through monitor menu.or remove the SD card,plug in the computer to view the playback.

